



Fast Fold Screen User Manual

General Notes

1. Thank you for choosing our projection screen for your home or business. Please read the user manual carefully before proceeding. Follow the provided instructions to complete installation quickly and safely and keep in a safe place for future reference.
2. Only use attachments and accessories approved by the manufacturer.
3. To avoid damaging the screen, do not fold the screen or touch the screen directly with your hands, tools, or any other abrasive/sharp object.
4. When not in use, disassemble the screen to protect the optical surface from dirt, dust, grime, or any other impurities. Store the screen in the carrying case provided.
5. When cleaning, use a soft damp cloth with warm water or diluted liquid detergent to remove any marks on the casing or on the screen surface. Never attempt to use any solutions containing corrosive chemicals or abrasive cleaners on the screen surface.
6. Do not use in a wet environment.
7. Spare parts should be stored out of reach of small children in accordance with household safety.
8. We will not be responsible for damages done due to user error or false operation.

Safety Guide

 
1. When using the screen, place it on a flat, stable surface and ensure the joints are locked and the hand screws are secure.
2. If the screen is being used outdoors, ensure there are no environmental hazards which could cause damage to screen and others around it. This includes but is not limited to wind, precipitation, flying objects, and pets.
3. Although the frame is aluminum, the weight of the screen can do damage as well as the case. Take caution to carefully assemble the screen and use in a place with no hazards.
4. The screen should only be operated by adults.
5. Do not climb on the screen or hang things from it. This can cause the screen to fall and cause damage or injury to others.

Packing List

- Screen fabric
- Screen fabric case
- 2 folding legs
- 1 screen frame
- Aluminium storage box
- Hand screws



Assembly Notes

- Clear a space on the floor large enough for screen assembly.
- Ensure you know which side of the projection screen is the front and which is the back. This can be distinguished by the card which is on the corner of the fabric screen or in the bag
- See Figure 1 for front projection and Figure 2 for rear view projection.





Assembly Instructions



1. Take the frame out of the box and place it on a flat surface. First check that the snaps are on top and if so, proceed to unfold the longer sections first.

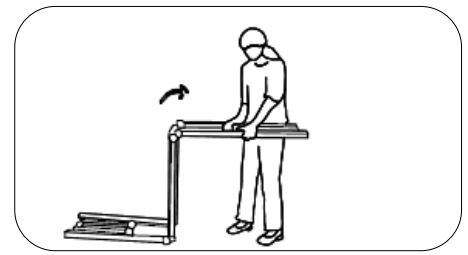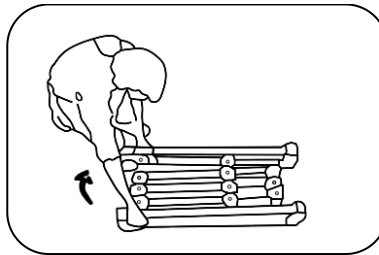



2. Unfold the frame until the latch on the hinge "clicks" into place. Repeat the procedure for the shorter sections.

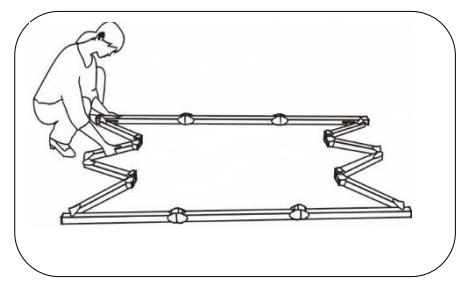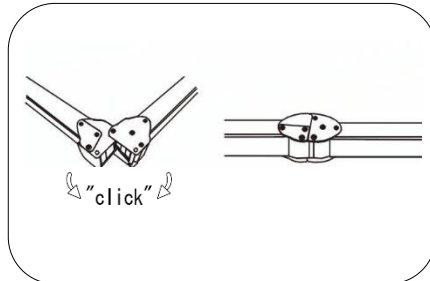



3. Make sure all 4 corners of the frame are at 90° and that the hinged support bar is straight and not bent.

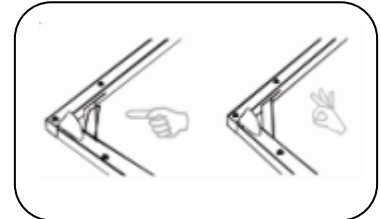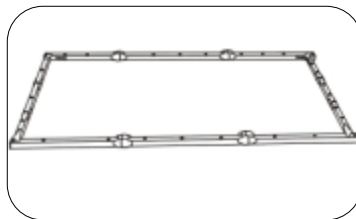





If your screen has a 200" or greater diagonal, the frame will come in 2 parts. Attach the upper frame to the lower frame and fasten 2 frames with M8x16 screws.

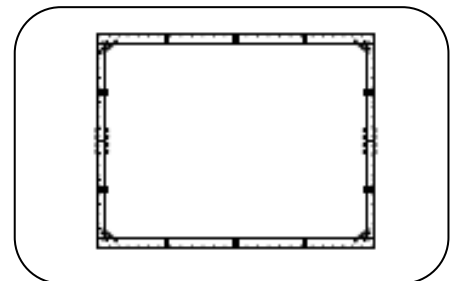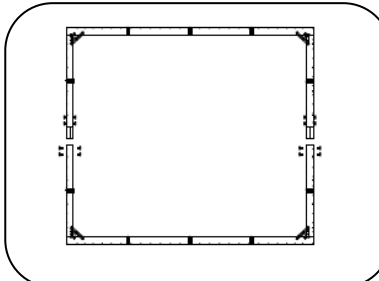


4. Take the screen fabric out of the bag and put it inside the frame next to the corner. Unfold as shown in the diagram.

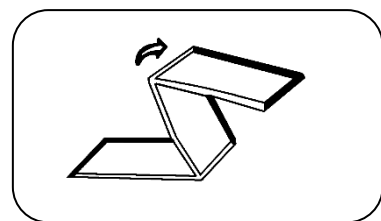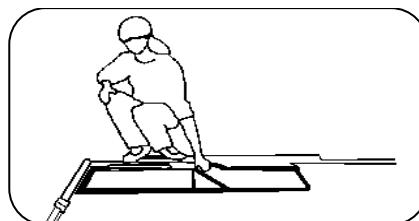



5. Once the screen fabric is fully unfolded, secure it to the frame with the snaps. Secure the snaps starting from the corners and working towards the middles. Secure the shorter side before the longer side.

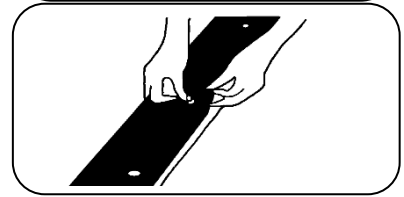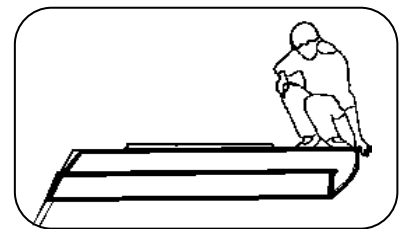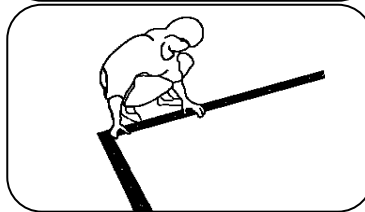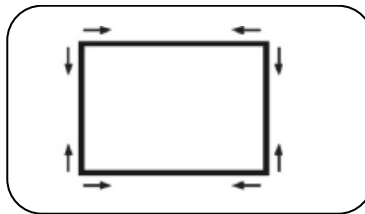



6. Take the folding legs out of the box and unfold as shown. Make sure the hinges click into place.

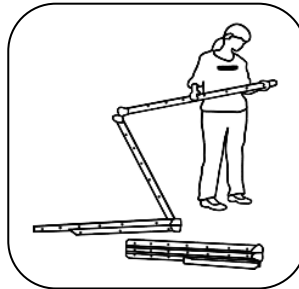



If the diagonal of your screen is 200" or greater, use the hand screws to secure the support leg to the vertical leg in an appropriate position. The support leg can be adjusted to an appropriate length. If the frame is attached to the legs higher up than the support leg, the support leg should also be attached higher up.

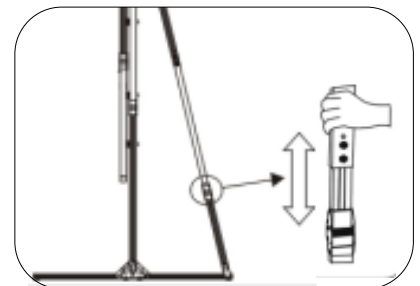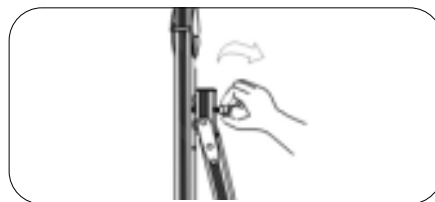

7. Lay the frame on the floor and position the legs over the sides of the frame at the desired height. Use the hand screws to loosely attach the frame. Repeat with the other leg and when in the desired position, proceed tightening both sides firmly.

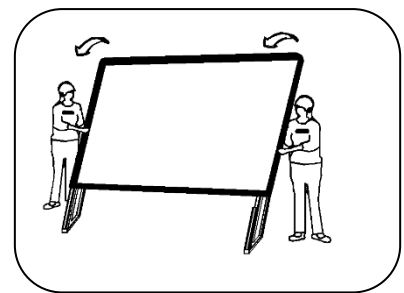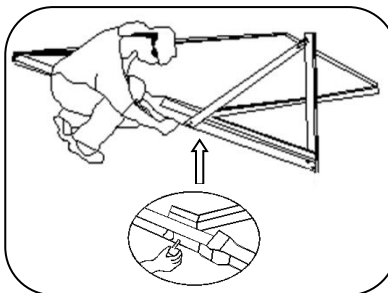

8. When the frame is in the vertical position, fold the front facing feet of the legs out. Assembly is completed and the projection screen will be stable on a flat surface.

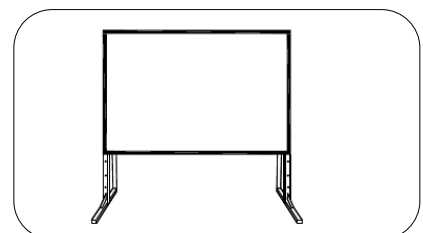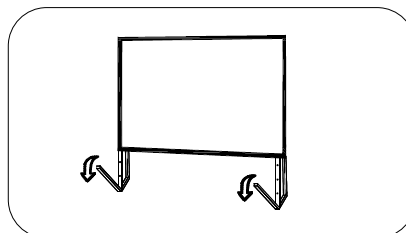

9. After using the screen, disassemble the screen and store it in the box provided. To disassemble the screen, implement the assembly procedure in reverse order.

