




Quick-Assembly Screen Frames User's Guide

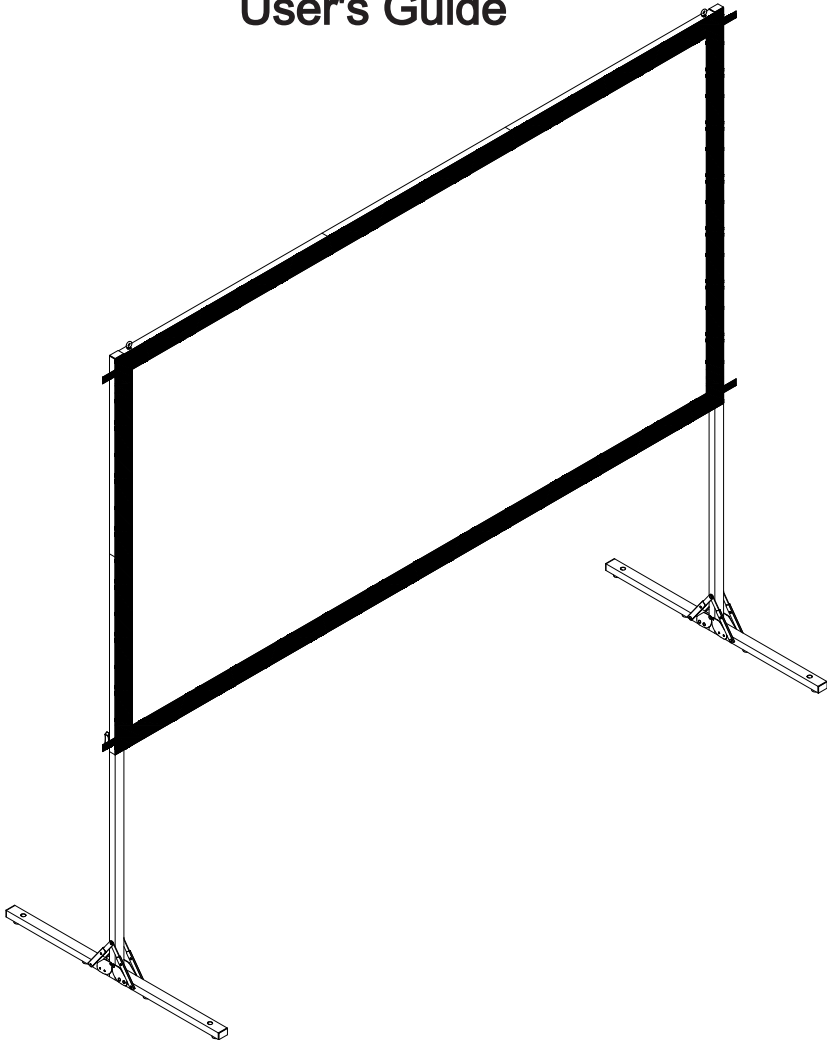


Please always follow the instruction - user's manual, assembling and usage.



To the owner


Thank you for your purchase, we only use the most durable screen and frame materials to give you trouble free enjoyment for years to come. Please take a moment to read the user manual before assembling to avoid any issues.

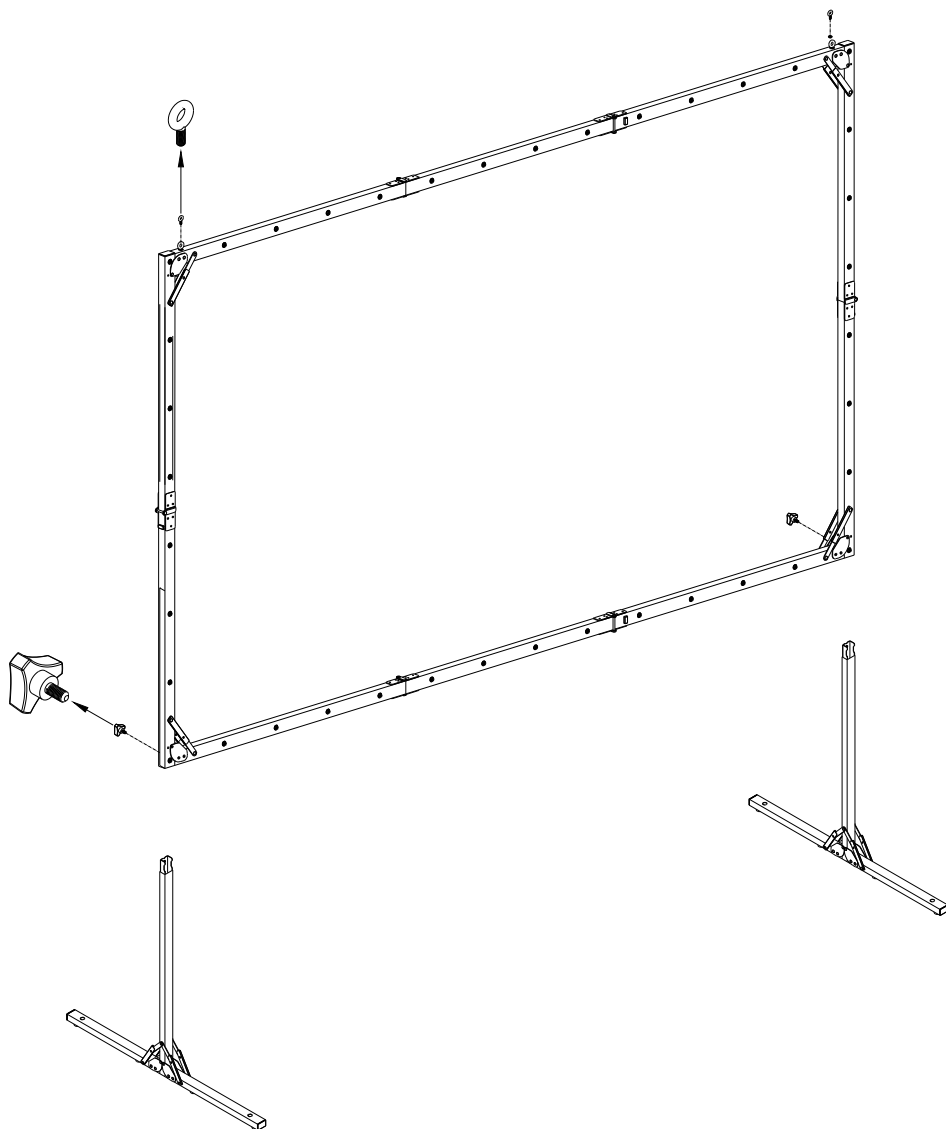

Procedure


Frame and legs are made of 38*25mm square hard aluminum tube with an anodized finish. With proper care they will provide many years of use. Please follow the instructions below.

1. Remove the frame from its case and wrapping. Position it as shown .(as picture 1)
2. Unfold the frame following the directions given below so that it is lying flat, Snap latches will automatically lock (as picture 2).
3. While holding the bottom of the frame in place, lift the top of the frame to unfold the sides. Lock down all four corner braces .(as picture 3)

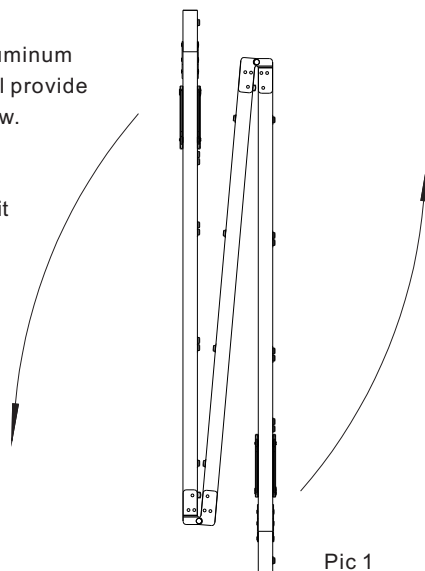


Pic 1

 Top




Pic 2

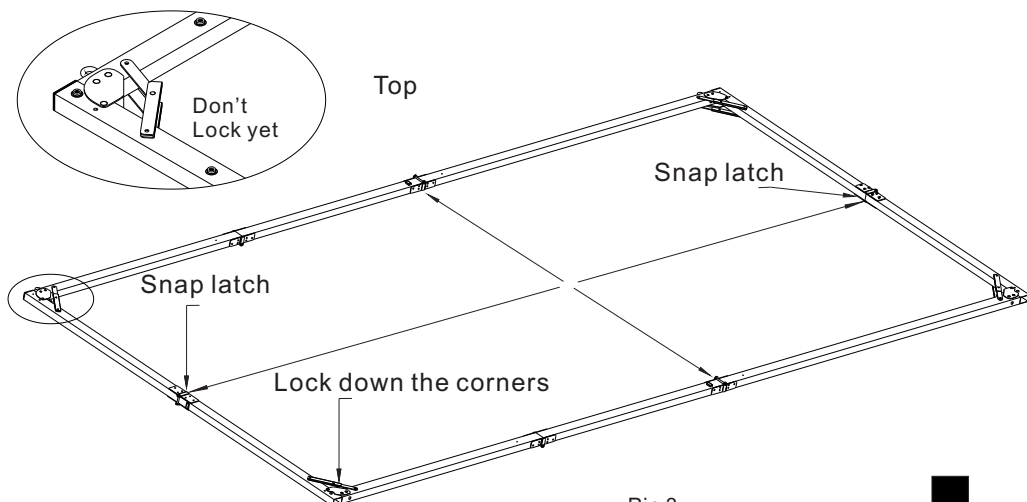

Pic 3




4. Connect the frame to the legs, lock down triangle hand shank.(as picture 4)

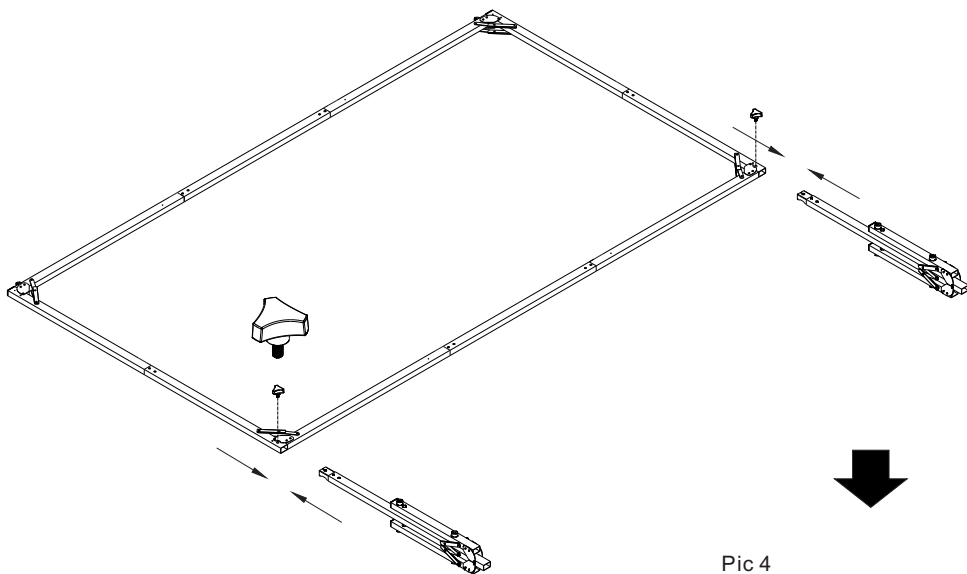


Pic 4

5. Installation is finished for the frame and legs.(as picture 5)

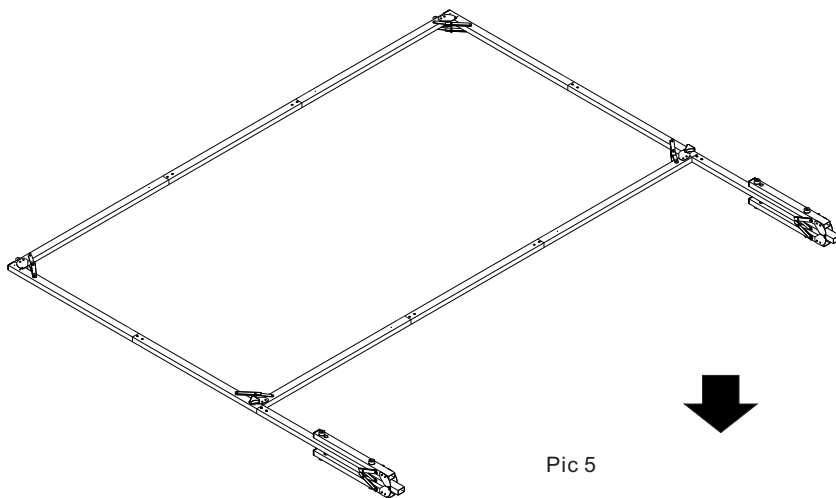

Pic 5

6. Remove frame 180° and put down. Set up the fabric .(as picture 6)

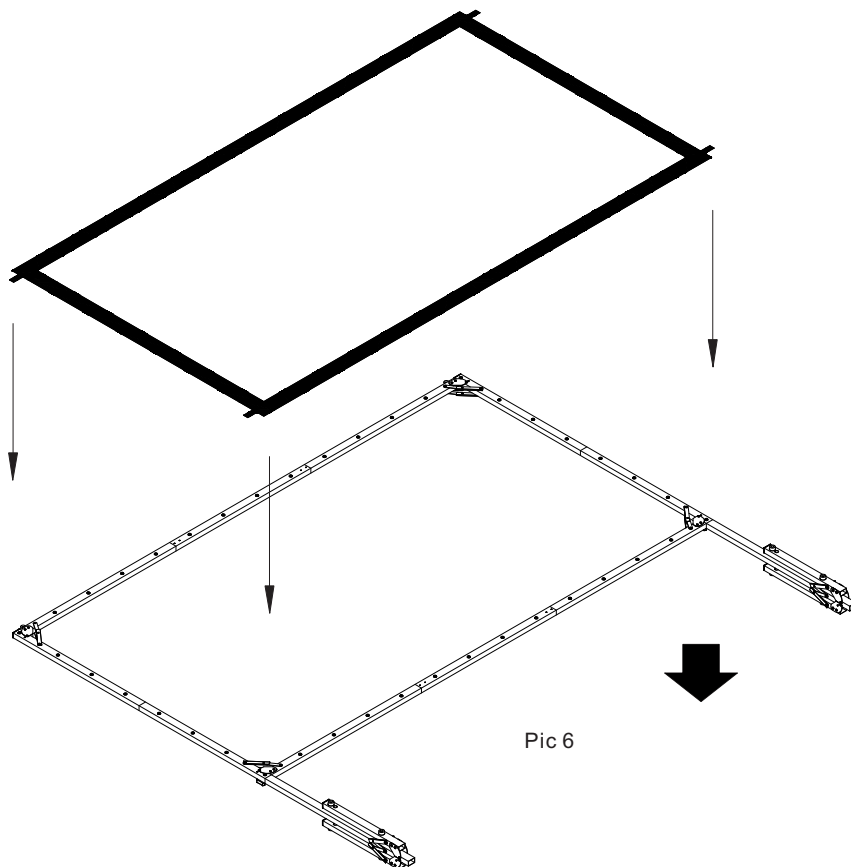

Pic 6


Fabric installation

- 1.First, attach the four corner buttons to the frame. (The corner handles make for easy installation during cold weather)
- 2.Second, press all the corresponding buttons of the frame and fabric.

Note:


Ensure there is no peaked and hard object under the fabric. Cover the screen fabric with clean cloth or paper to protect the fabric from getting dirty. .

7. Stand the screen up and unfold "T" leg(as picture 7)

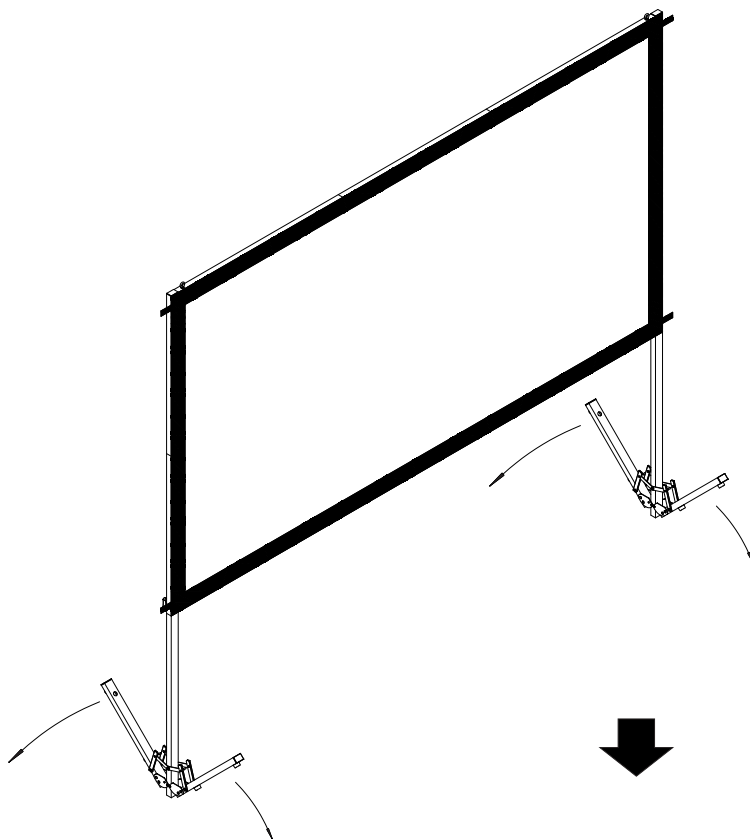


Pic 7

8. Under special circumstance(such as uneven earth or high wind) insert the pegs into the ground to enhance the stability of screen. (as picture 8.9)

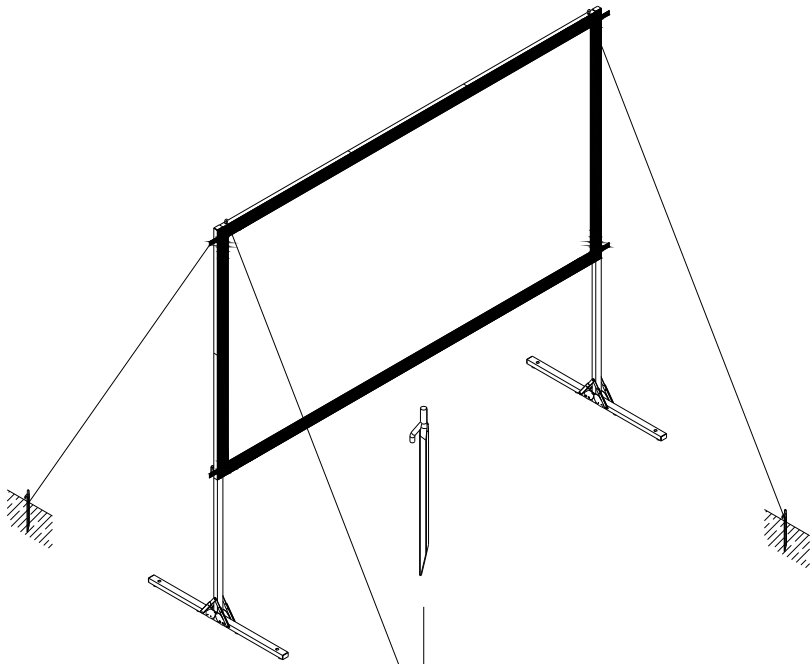


Pic 8

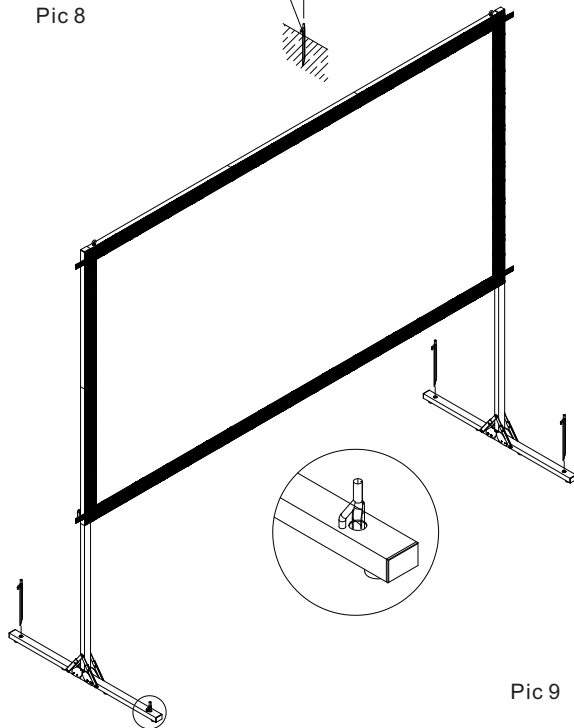


Pic 9

Note:

1. Attach leg to each side of frame using 1 speedy cranks per leg.

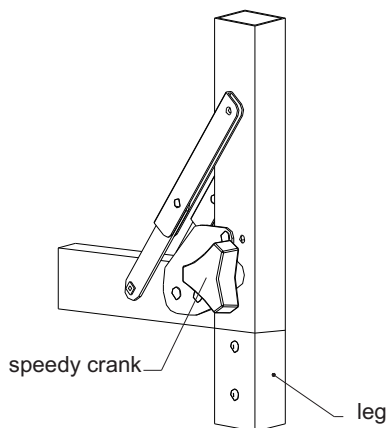

2. To fold frame, unlock all four corner braces. Push the snap latch buttons and fold the frame.

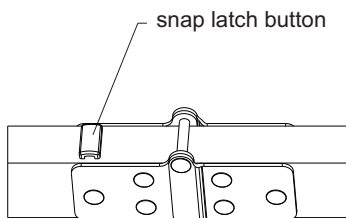

Part List

1. Frames	1 pcs
2. Legs	2 pcs
3. Peg	8 pcs
4. Rope	2 pcs
5. Screen fabric	1 purchase
6. Triangle hand shank	3 pcs

Folding The Picture Surface For Packing

When folding the screen material for packing, observe the following precautions before proceeding:

1. The surface should not be allowed to contact painted, varnished or plastic finished objects for a prolonged period of time.
2. Make certain the picture surface is on a clean, flat surface.

Then proceed in the following manner:

Place clean white paper with no printing on top of the picture surface. If paper is not available, a soft white cloth or something similar will serve the same purpose. Under no conditions should newspaper or anything similar be used since these may damage the screen material.

1. With the viewing side facing up, fold the fabric in half from top to bottom. Make certain when folding, the surface does not come in contact with either the black binding, grommets or snap buttons.
2. If the material on the first fold is more than 3 feet high, then fold once again, but always place clean tissue paper between the folds.
3. For large size screens, fold in half again if necessary. Make certain when folding, the surface does not come in contact with either the black binding, grommets or snap buttons.
4. After the top to bottom folding procedure is completed, then fold from left to right and continue folding until the fabric is of sufficient size to fit into the leatherette case.

NOTE: Keep the screen surface in the envelope provided when it is not in use. Failure to observe these normal precautions may cause discoloration of the material.

Cleaning

Surfaces can be cleaned as follows:

Using a white clean cloth (100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction. Do not use a circular motion. Using a dry 100% cotton cloth, wipe dry after each cleaning session. To clean a stubborn stain or a sticky surface, use denatured alcohol (methanol or methyl alcohol) following the same procedure as for water.
