

Adjusting the limit Switches on the Luna Series Screen

There are two limit switches on the Luna Series screen. The UP limit switch and the DOWN limit switch. These switches are located on the left hand side of the screen

UP LIMIT Adjustment



The UP limit switch (grey) comes pre-set from the factory – DO NOT TOUCH- turning it in the wrong direction may damage the screen (If necessary please consult a technician before attempting this adjustment)

DOWN LIMIT Adjustment

The DOWN limit switch (Yellow) can be adjusted for increasing or decreasing the amount of black drop on your screen.




To reduce the amount of black drop, first fully open the screen and then using the supplied plastic octagon tipped adjustment tool. Turn the yellow switch counter clock wise (L) one-two full turns, and then retract (close) the screen and then open the screen. The screen will now stop at the new down position, repeat this process until the screen stops at your desired position.

Note:

- 1. New out of the box it may take a couple of cycles before the screen starts moving up (be patient)
- 2. This screen is equipped with an overheating sensor, if the screen pauses during adjustment wait 5 minutes for the motor to cool and then continue adjusting.

To increase (add) black drop, turn the yellow adjustment screw a full turn, clockwise (R) and the screen will drop in small increments without the need to cycling the screen. Continue this process until the screen is in the desired position

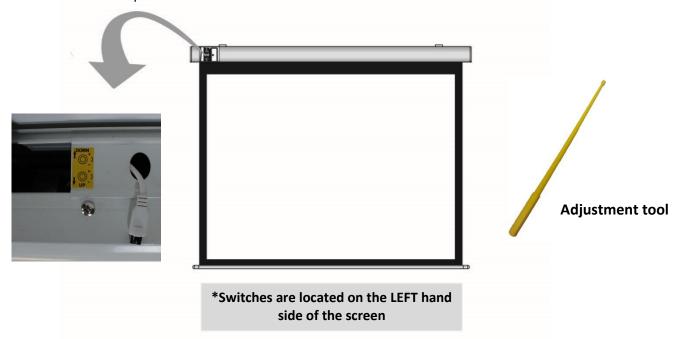

Caution: Over adjusting the screens up or down limit switches may damage your screen and void your warranty. If you are unsure or have questions please contact us before attempting.

Elunevision Technical support at (905)561-1073 or email sales@elunevision.com